

Software Release Note: Renishaw RCU-CS (v2.0.5)

1. General

History:

RCU-CS configuration software allows operational modes to be configured before the RCU10 may be used. It also provides a display to monitor the compensation process, environment and error status.

Replaces:

Version 1.9.8

Operating system and PC compatibility:

(Supports both 32 and 64 bit architecture)

- Windows XP (SP2 or above)
- Windows Vista
- Windows 7
- Windows 8

PC Specification:

Windows NT removed from Version 1.9.8

PC Software Pre-requisites:

Windows Installer 4.5

<http://www.microsoft.com/downloads/details.aspx?FamilyID=5A58B56F-60B6-4412-95B9-54D056D6F9F4>

Availability:

Available as a free of charge upgrade for current users (available on CD and as a download from the Renishaw website)

Caution:

Any software installation can give rise to operating issues due to local system architecture and existing operating procedures. Whilst this version of RCU-CS software may offer enhanced features over your current version you should always follow your own corporate guidelines regarding software use before installation. This may involve contacting the appropriate I.T./Business Systems personnel within your organisation for guidance and assistance

Language support:

English

2. Key enhancements compared to Renishaw RCU-CS v1.9.8

- Addition of 'Laser head' to the type of sensors defined for the system sensor configuration.
- Addition of 'Laser head' signal strength meter window to the sensors display. If there are any laser head sensors configured for the system – these will be displayed in a separate window. Each system laser head shall display a signal strength meter, signal strength percentage and status colour (green, amber and red).